

Quick Installation Guide (Power Cube)

V 1.0.2
10-203-00764-02-X


Content

- 1. Packing List
- 2. Installation Procedure
- 3. System Diagram
- 4. Grounding Connection
- 5. PV Connection
- 6. AC Connection
- 7. BACKUP Connection
- 8. RJ45 Connection
- 9. COM Connection
- 10. System Commissioning

Inverter	Battery Series	Battery No.
Inverter	EQ5500-S (w)	2~9
	EQ4800-S	
	EQ5500-S	
	EQ5000-S-P (w)	
	TQ5500-S (w)	
	TQ5000-S-P (w)	2~6
	EQ3300-S	
	EQ3300-S (w)	
	EQ5000-S	
	EQ5000-S (w)	
	TQ5000-S (w)	


Note: For battery series selection, please consult local sales representative.

Inverter & Battery Series Matching Table

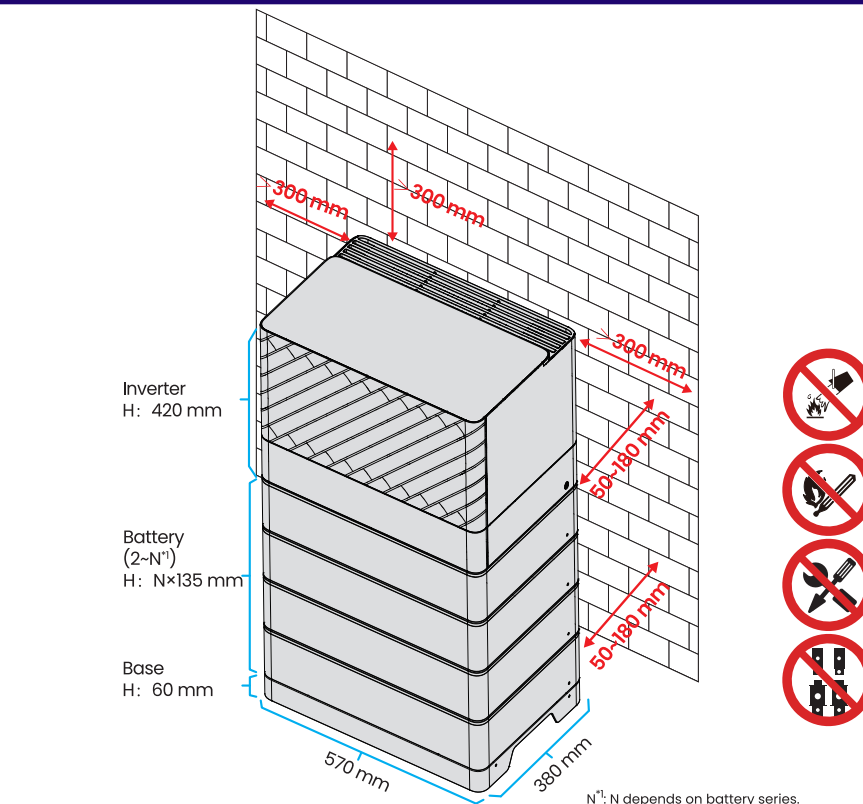


Note:
• All installation procedures must fully comply with all applicable regional and industry standards, covering cable selection, wiring, protective devices, and overall installation practices.


1. Packing List

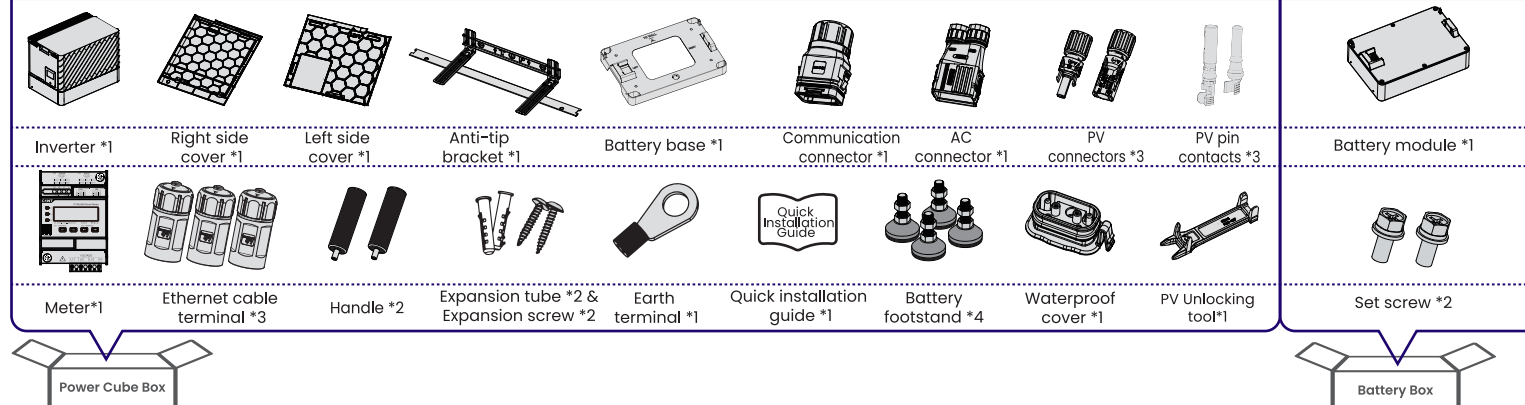


2. Installation Procedure

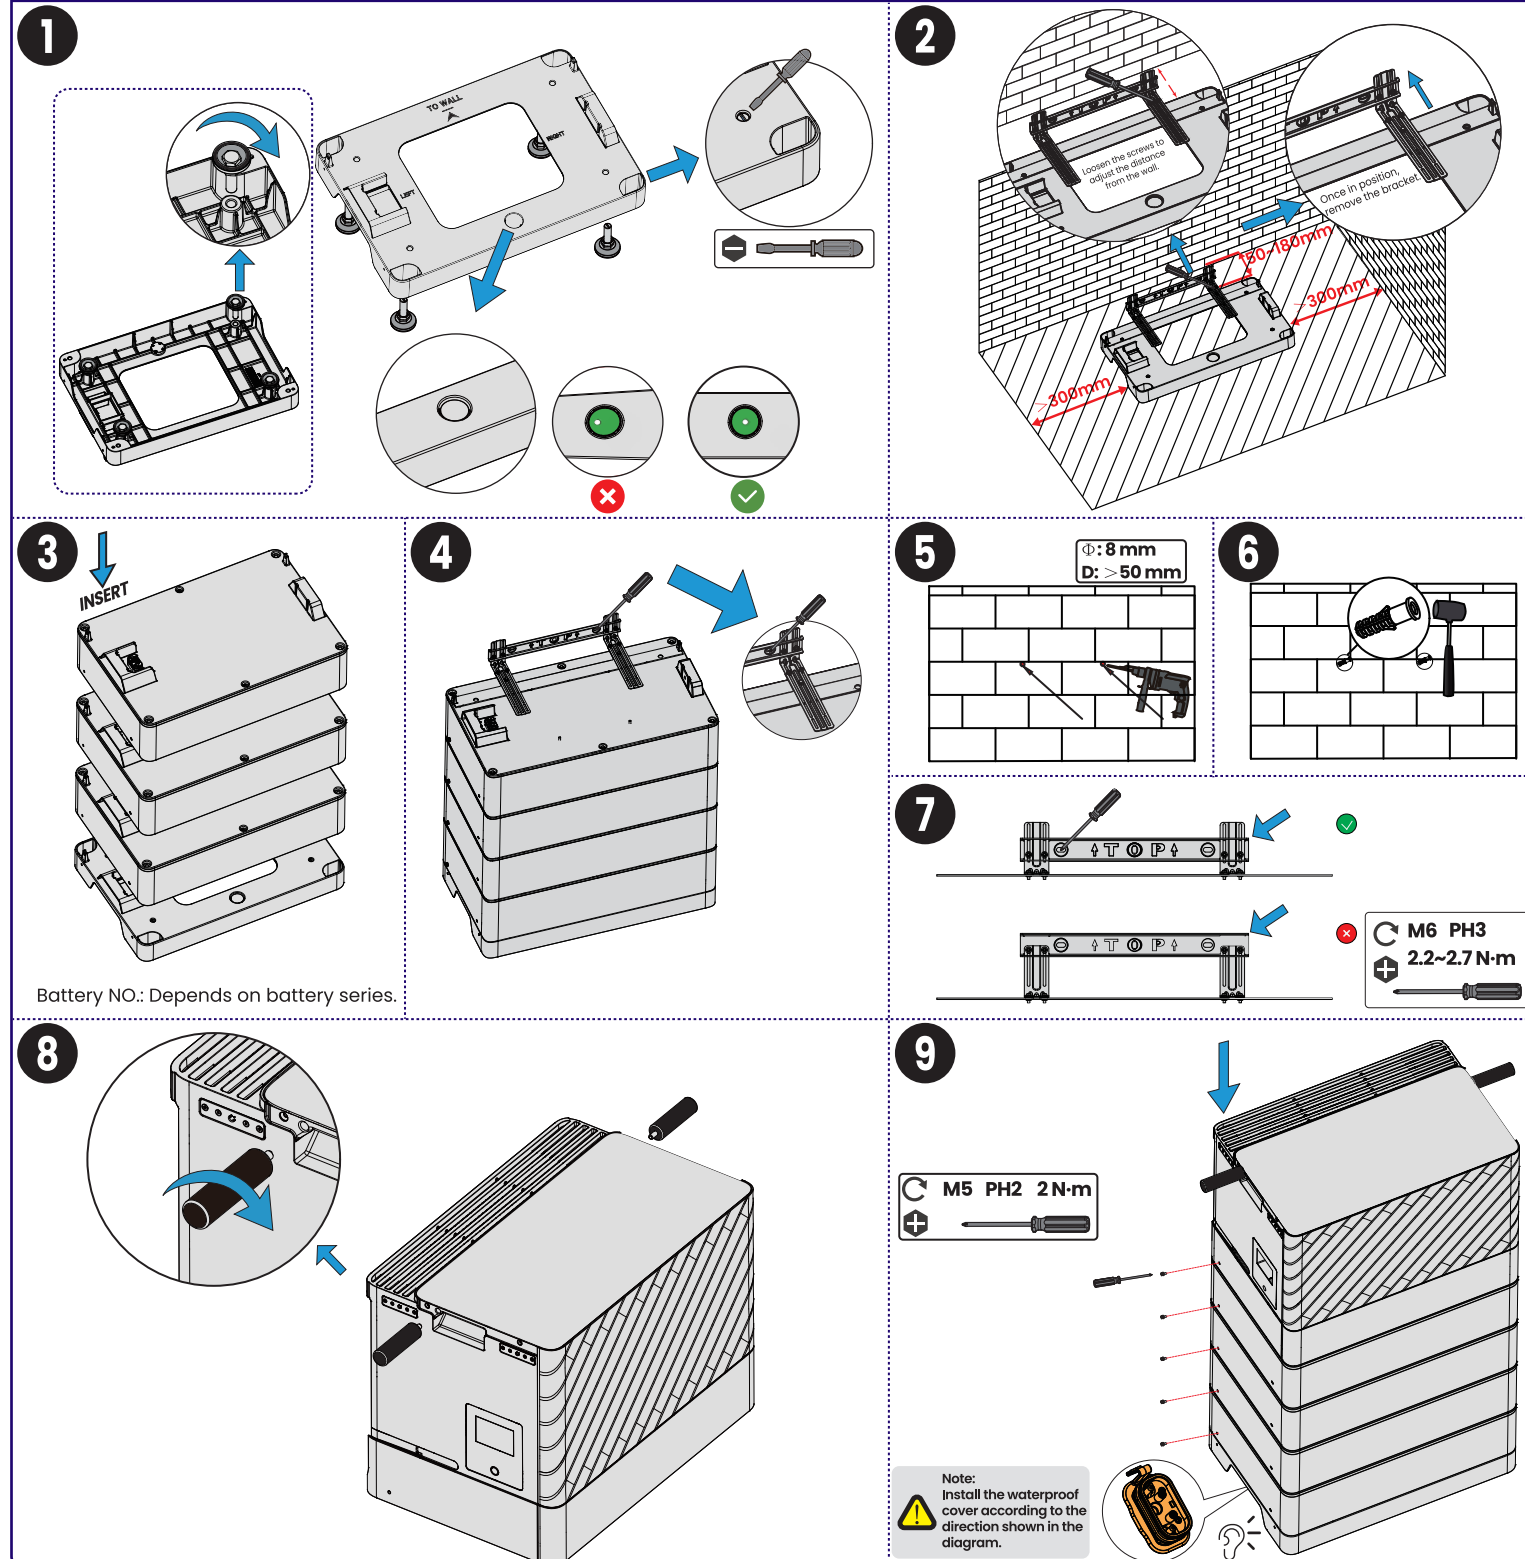


3. System Diagram

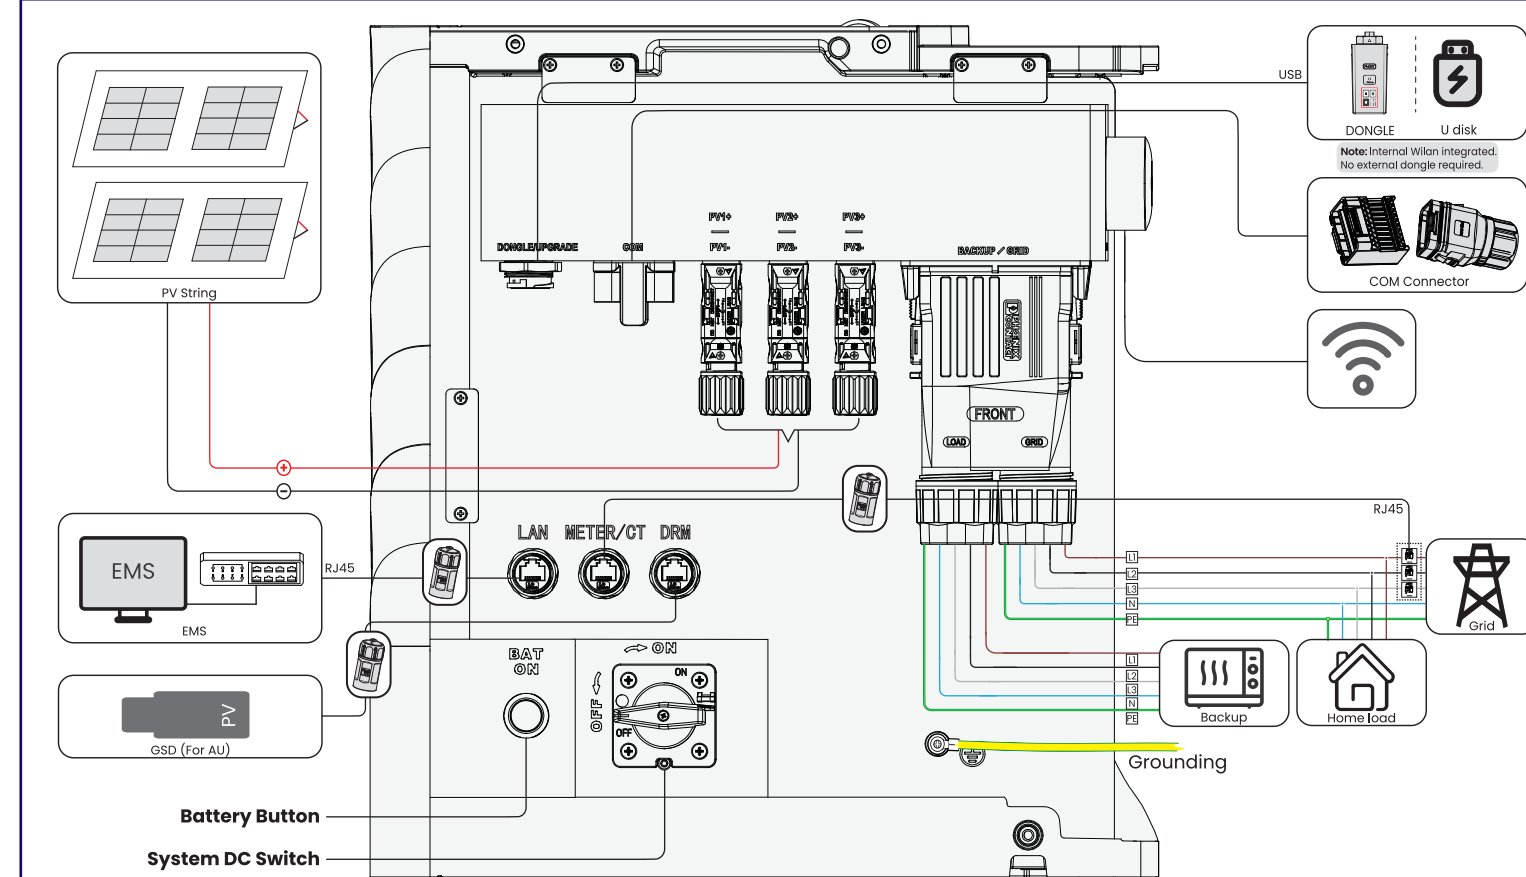


4. Grounding Connection

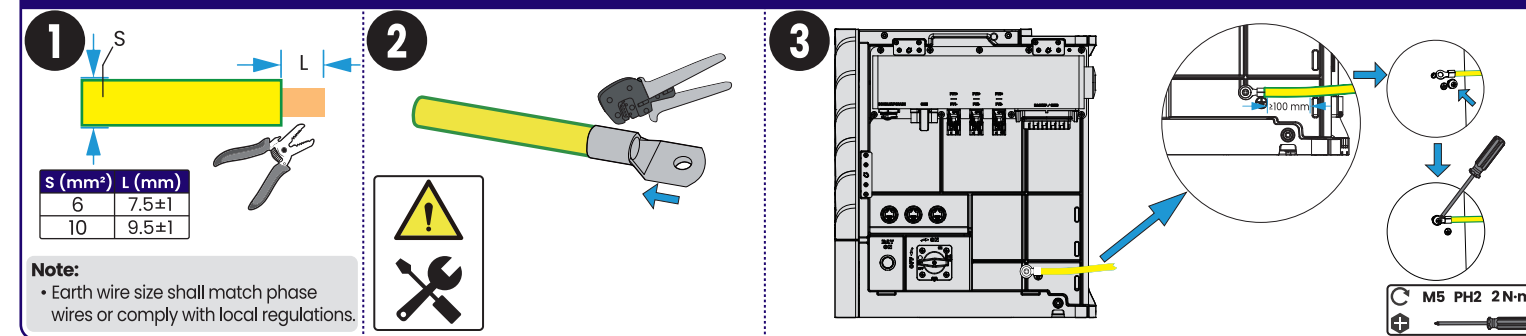


5. PV Connection

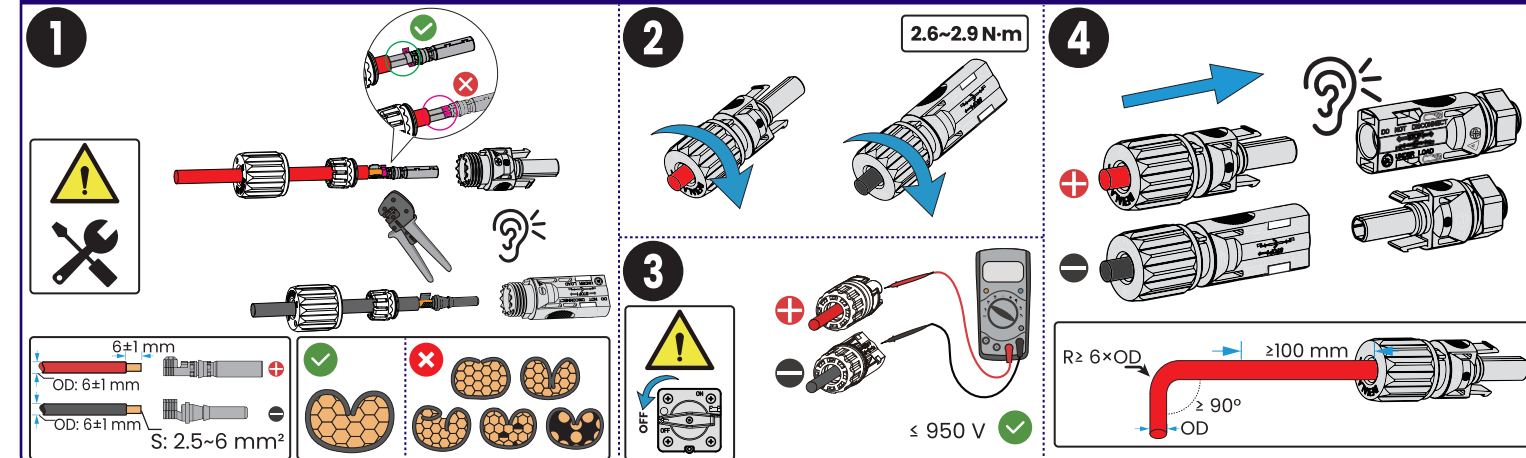



6. AC Connection

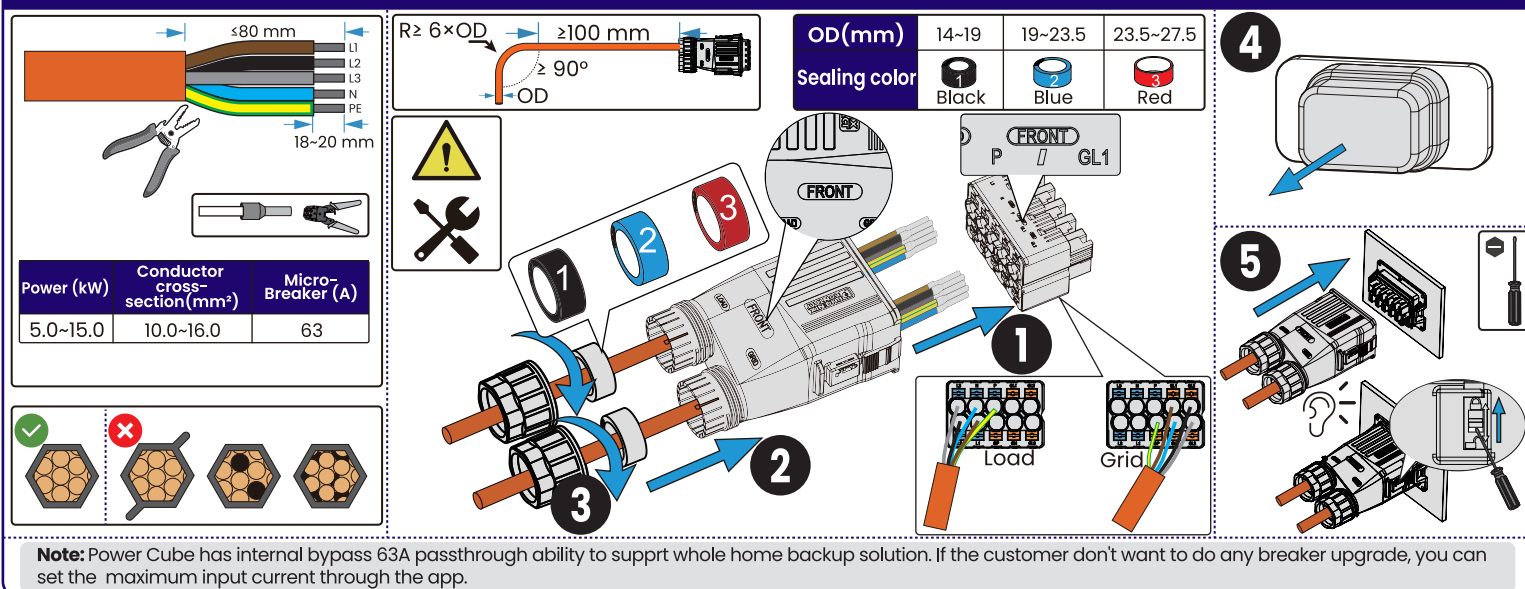


7. BACKUP Connection

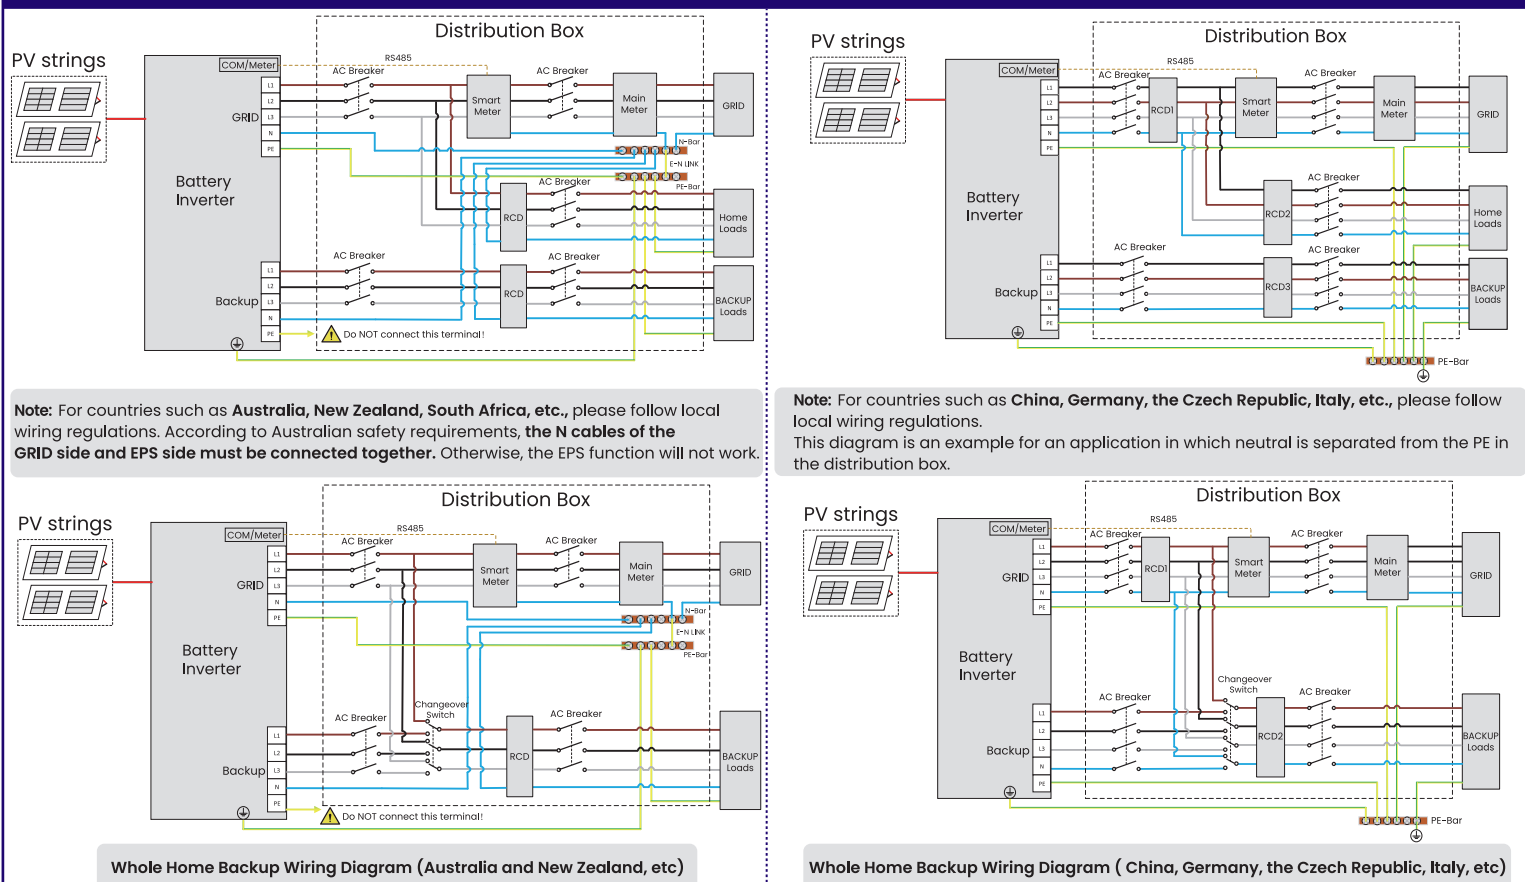

8. RJ45 Connection

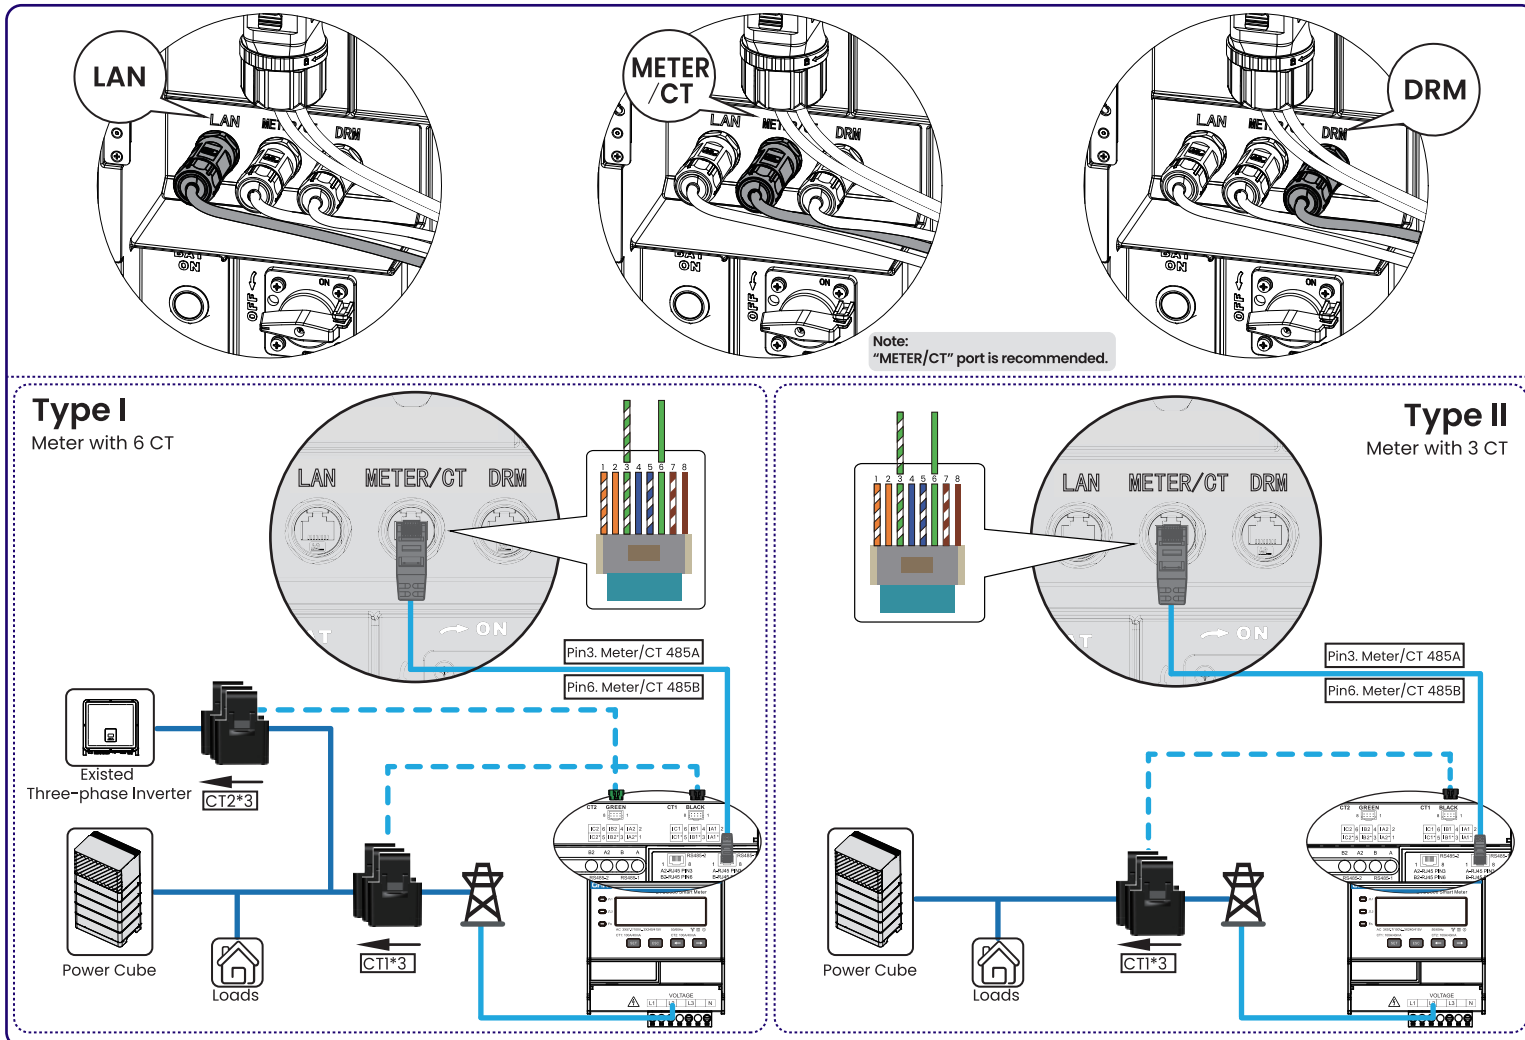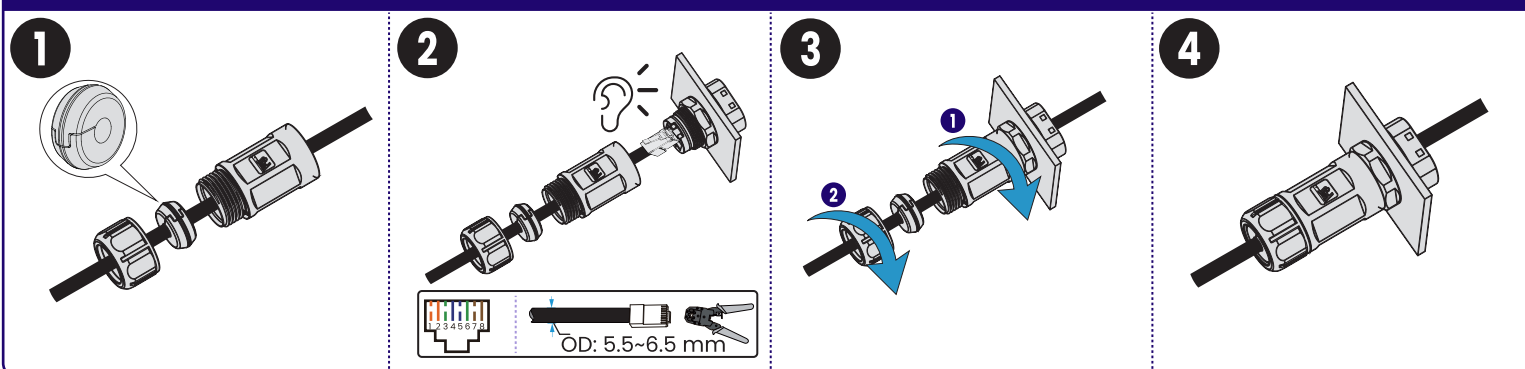

9. COM Connection

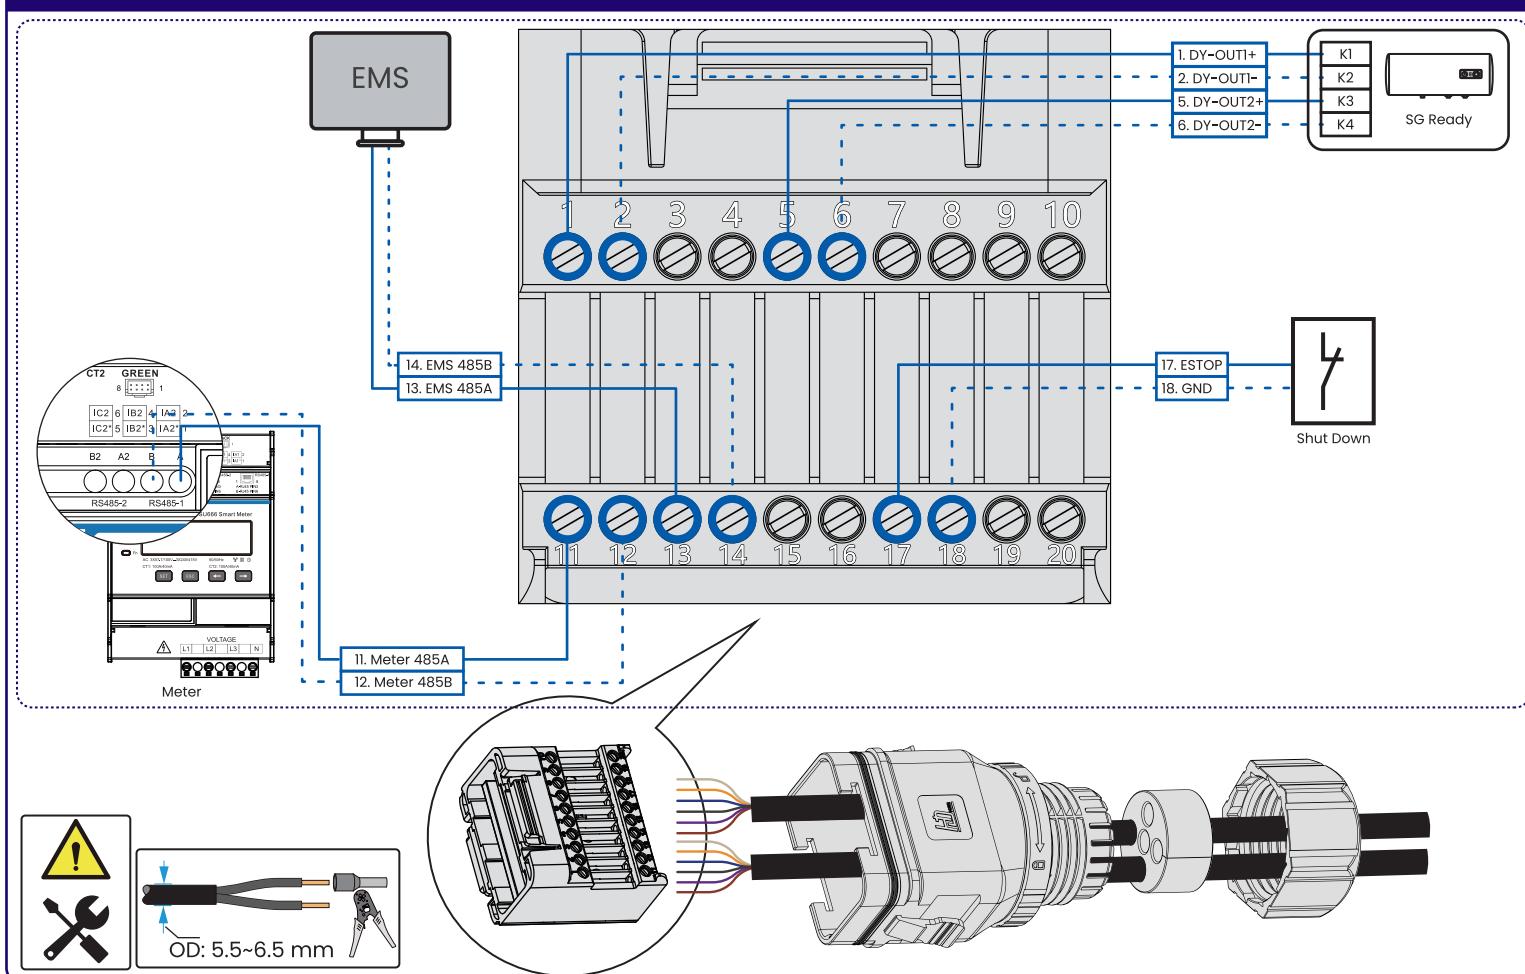

10. System Commissioning

