

Quick Installation Guide


7.3KW Fox ESS AC EV Charger

Please read this guide carefully to prevent improper operation before use.

Directory

1.	Packing List	1
2.	Product Icon	2
3.	Installation Preparation	2
	3.1 Electrical Connections	3
	3.2 Communication wiring	5
	3.3 Wall Mounted Installation Method	7
	3.4 Floor/Vertical installation Method	9
4	Inspection after installation	11

1. Packing List

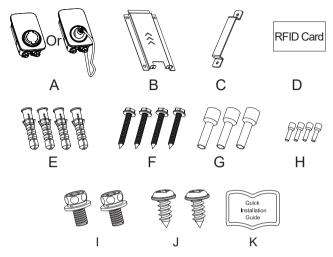


S/N	Name	Quantity
Α	EV Charger (EV Plug or Plug Holder)	1
В	Mounting Backplate	1
С	Mounting Backet	1
D	RFID Card	2
Е	Ф8*40mm Expansion Pipe	4
F	ST6*40 Expansion Screw	4
G	E6012 Tubular Terminal	3
Н	E0508 Tubular Terminal	4
ı	M4*10mm Screw Assembly	2
J	ST4.2*9.5mm Self-tapping Screw	2
K	Quick Installation Guide	1


2. Product Icon


- 1) Meaning of lights
 - •Green breathing light standby status
 - •Blue Steady EV Plug inserted status
 - •Blue breathing light charging start status/ pause
 - •Blue running light charging status
 - •Green Steady charging end status
 - Red Steady Charger fault, shutdown protection
 - •Yellow Steady locked status
- ②EV Plug holder
- ③RS485 Communication wire
- 4 Incoming cable
- Stop button
- **6** Mounting Backet
- Mounting Backplate
- (8)Side cover


3. Installation Preparation

    - 1. The EV Charger can be installed on a flat surface that can support its weight (such as walls, columns, etc.).
- Please install an EV Charger where the EV Plug cable can be connected to the vehicle charging port (without pulling the cable).
- 3. The recommended installation height of the EV Charger is 700~1500mm.
- 4.Do not install the EV Charger in an environment that may cause damage to it.









Vertical 🤡

Tilt Backward 🤡





Tilt Forward

 


Installation Schematic Diagram

3.1 Electrical Connections

A leakage protection switch needs to be installed. The leakage protection switch should use Type A, not less than 32A, and the input wire should be led out from the leakage protection switch. It is recommended to use wire diameter 6-10mm² cable.

Trim all cables to 55mm and peel off the insulation sheath to expose the conductor by about 16mm (as shown in the figure).




L: Brown/red/green or yellow wire

N: Blue/black wire

PE: Yellow green wire


Note: Please refer to the local cable model and color during actual installation

 Step 1




Use crimping pliers to crimp the tubular terminal (G) and cable.

Step 2

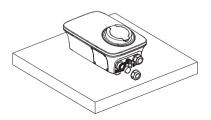


Unscrew the gland nut and puncture the wire-through hole.

Step 3

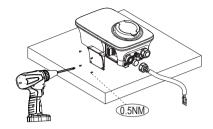


Unscrew the gland nut and puncture the wire-through hole. Open the side cover and install the cable (wire diameter ϕ 13-18mm).

Step 4

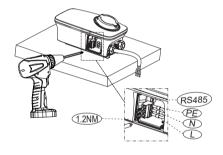

Install the cable into the terminal block and fix it, and tighten the gland nut.

Step 5

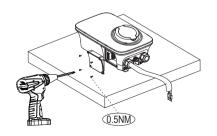

Lock the side cover and complete the installation.

3.2 Communication wiring (The communication wire is required only if an electric meter is available on the site of use)

Trim all cables (wire diameter 0.3mm²) to 15mm (as shown in the figure), peel off the insulation sheath to expose the conductor by about 8mm


0.3mm² 485A 485B 20 485B 20 485B

485A: Brown/red/green or yellow wire

485B: Blue/black wire


Note: Please refer to the local cable model and color during actual installation

Step 1

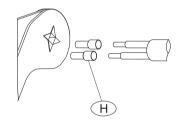


Use crimping pliers to crimp the tubular terminal (H) and cable.

Step 2

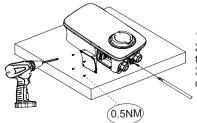


- 1. Open the side cover.
- 2. Install the communication cable (wire diameter ϕ 3~5mm) from the communication port.

 Step 3




Install the cable into the signal terminal, tighten the screw and compress the tubular terminal.

 Step 4



Fix the male and female ends of the signal terminal by connecting them.


Step 5

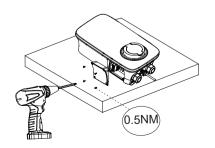

Lock the side cover and complete the installation.


3.3 Wall Mounted Installation Method

Step 1

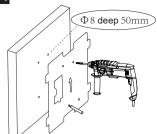


- Mark 4 holes according to the installation positioning card on the wall
- 2. Use an 8mm drill bit to drill holes (with a hole depth of over 50mm).
- 3. Clean the hole position.

Step 2

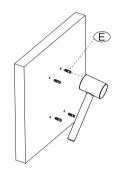


Insert the expansion pipe (E) into the hole and fix it tightly with a rubber hammer.

Step 3

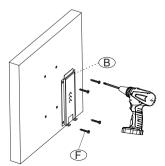


Fix the Mounting backplate (B) to the wall with screws (F).



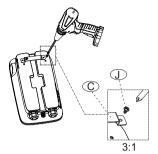


Fix the Mounting backet (C) onto the EV Charger with screws (J).

 Step 5




- 1. Hang the EV Charger into the Mounting backplate.
- 2. Tighten the screws (I) to complete the installation.

3.4 Floor/Vertical installation Method(When only purchasing columns and requiring installation)

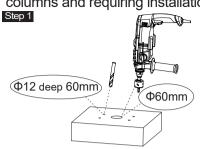


- 1. Use a 12mm drill bit to drill four 60mm deep holes with a spacing of 170*120mm.
- 2. Drill one Φ60mm outlet hole in the center.
- 3. Clean the hole position.



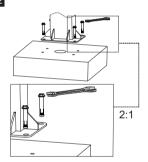


Install the foot screw and fix with a wrench

 Step 3




Router the input wire into the column hole through the ottom of the column.

Step 4

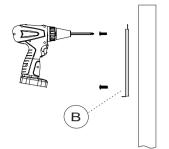


Fix the Mounting backplate (B) to the column with screws.

Step 5

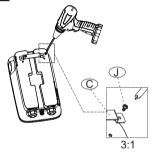

Fix the bracket (C) onto the EV Charger with screws (J).

 Step 6



- Hang the EV Charger into the Mounting backplate.
 Tighten the screws (I) to
- complete the installation.

4. Inspection after installation

1) Cleaning

Properly dispose of all transportation and packaging materials in accordance with local regulations.

Clean up the debris inside and around the pile, such as small sections of cables, screws/nuts, etc. Do not leave them behind

Install tools on site or inside the pile (record the type and quantity of tools to prevent omissions).

Clean the insulation with an anti-static cloth and do not use any corrosive solvents

2) Inspection

Check if the base is fixed and sealed.

Check whether the internal components of the equipment are secure and reliable.

Check whether the electrical connections and wiring are correct and complete, whether the connections are reliable, and check the grounding is it reliable.

Check whether the protection level of the equipment meets the requirements, especially at the cable inlet at the bottom of the pile. Check appearance, markings, integrity, cleanliness.

11

Users can download the (Android and IOS) APP by scanning the QR code in the Quick Installation Manual, or search for EliteCharger through the App Store and Google Play.

Obtain the APP QR code



Please follow the steps below to download our latest multilingual manual/Quick Installation Guide;

Scan QR code \rightarrow Select your language \rightarrow Select to download User Manual or Quick Installation Guide \rightarrow Download

Obtain User Manual QR code



Address: Longwan District, Wenzhou, China

Tel: +86(510) 68092998(General) +86(510) 68101679 (Sales)

Website: www fox-ess com

