


# EP5 Quick Installation Guide


## 1. Tools Required

The following tools will be required to install battery.

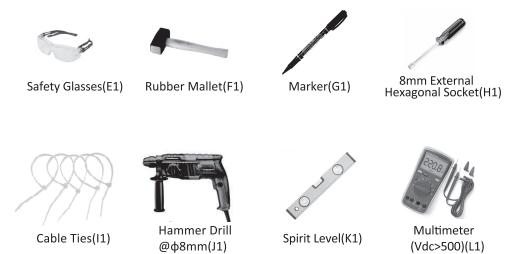


## 2. Packing List

Please check if following items are included with the package:

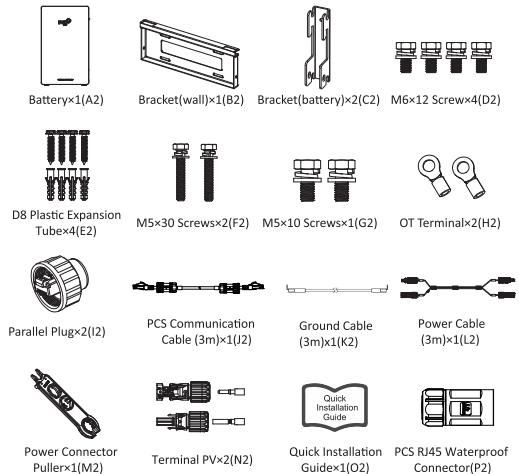

## 3. Product Appearance

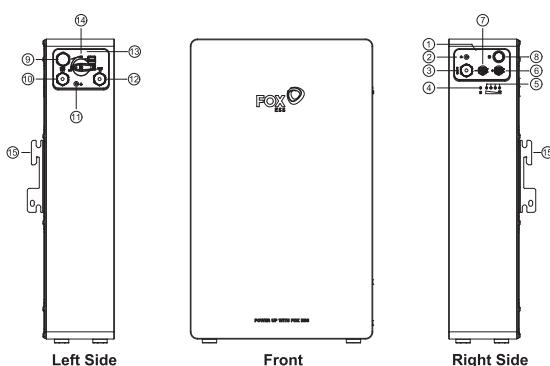

No.	Description	No.	Description
(1)	Handle	(9)	Valves
(2)	Ground Terminal	(10)	LINK OUT
(3)	PCS COM	(11)	Ground Terminal
(4)	BMS Status LED	(12)	LINK IN
(5)	BMS SOC LED	(13)	Handle
(6)	DC+	(14)	DC Switch
(7)	DC-	(15)	Battery Bracket
(8)	Power Switch		

## 4. Installation Prerequisites

### Installation Angle Requirements

The battery can be installed on the floor or on the wall. The installation angle requirements are as follows:

- Do not install the battery in a forward tilt, backward tilt, lateral tilt, horizontal position, or upside-down position.


### Installation Location Requirements

- The location should be far from the seaside to avoid salt spray and high humidity, with a distance of over 1000m.
- The location should be free from flammable or explosive materials, with a minimum height of 0.9m.
- The environment at the location should be cool, away from high temperatures and direct sunlight.
- There should be minimal dust and dirt at the location.
- The location should be free from corrosive gases, including ammonia and acidic vapors.
- The building should be of solid brick and concrete structure for installation on walls or floors. If other types of walls and floors are used, they must be made of flame-retardant materials and meet the load requirements of battery.


### Installation Space Requirements:

During the installation steps, ensure that there are no other heating device or flammable materials around the battery. Sufficient space for heat dissipation and safety isolation should be provided.

#### Standing mounting:

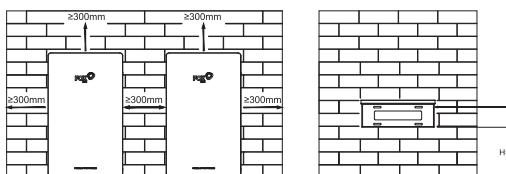

#### Wall mounting:

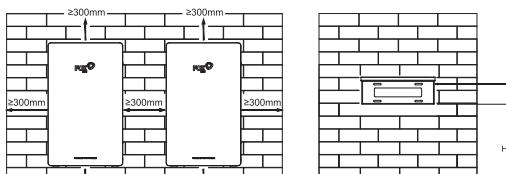


## 5. Installation Steps

### STEP-1:

The steps for installing the bracket are as follows:

- Place the bracket against the wall, adjust the hole position with a Spirit Level (K1), and mark the positions of the 4 holes.
- Remove the bracket, drill the holes with a hammer drill ( $\phi 8\text{mm}$ , depth range 45-50mm), and tighten the expansion bolts to ensure that the bracket is securely installed.
- Fix the bracket to the wall with ST6x40 screws (E2), ensuring that the bracket is installed in a horizontal position.

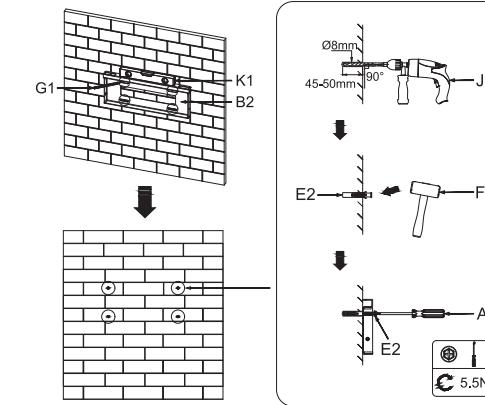


## 6. Wiring Steps

### Stand-alone Mode:


#### STEP-1:

Insert the 2 Parallel Plugs (I2) into the LINK IN and LINK OUT ports respectively.

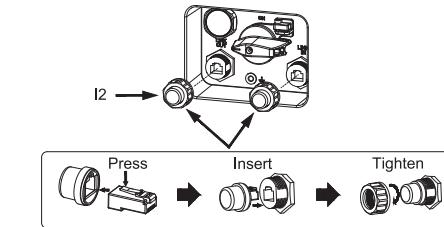



#### STEP-2:

Connect the inverter cables:

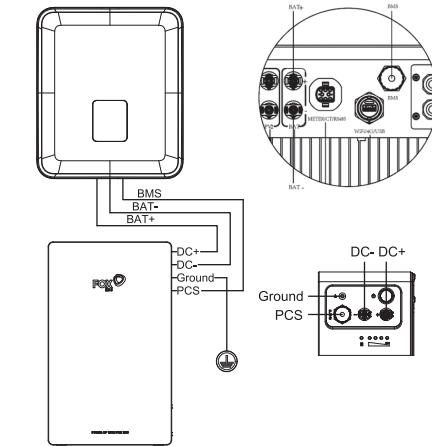


Note: Power Cable (L2) must be pulled straight from the battery DC+/- for more than 80mm before bending.


- Connect the Ground Cable (K2) to the ground.

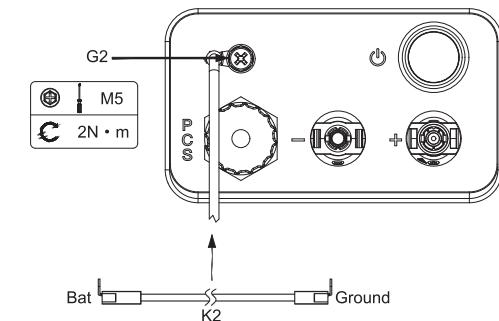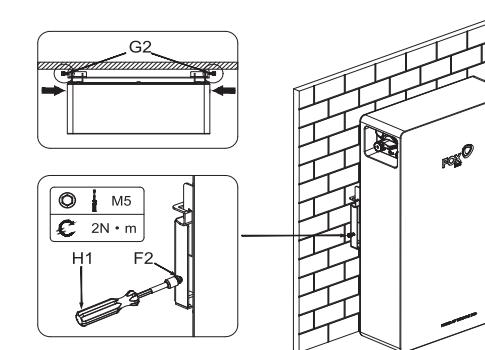

b. Connect the PCS Communication Cable (J2) to the BMS port on the inverter.

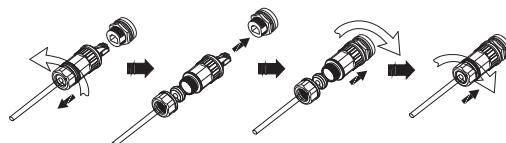

c. Remove the waterproof bridge from DC+ and DC-, then insert the Power Cable (L2) into DC+ and DC-.

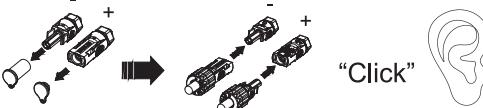


The steps for parallel connection of batteries are as follows:

- Insert the Parallel Plug (I2) into the LINK IN port, this battery is defined as the **Main** battery (whichever battery can be set as the **Main**).
- Connect the Ground Cable (K2) from the ground terminal of the **Main** battery (left side of the battery) to the ground terminal of the next battery (right side of the battery), and continue the same connection until the ground terminal of the last battery (left side of the battery).
- Use the PCS Communication Cable (J2) to cross-connect the LINK OUT of the previous battery with the LINK IN of the next battery. Start from the LINK OUT of the **Main** and continue until reaching the LINK IN port of the last battery.
- Insert the Parallel Plug (I2) into the LINK OUT port of the last connected battery.

Note 1: The steps of inserting the Parallel Plug (I2) are as follows:




Note 2: The steps of installing the parallel communication cable are as follows:

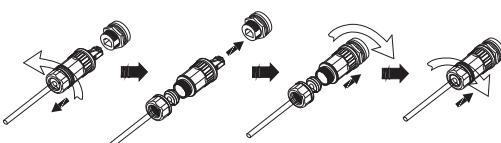


Note: Keep a distance of 300-600mm from the battery to the junction box. Power Cable(L2) must be pulled straight from the battery DC+/- for more than 80mm before bending.

- Connect the Ground Cable (K2) of the **Main** battery to the ground.

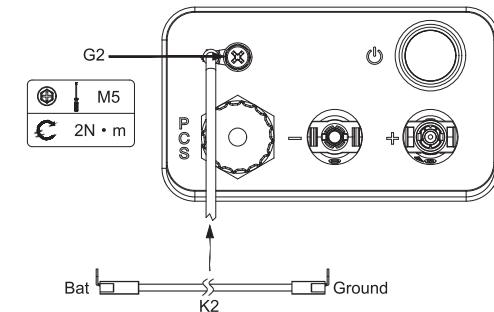


- Connect the PCS Communication Cable (J2) of the **Main** battery to the BMS communication port of the inverter.

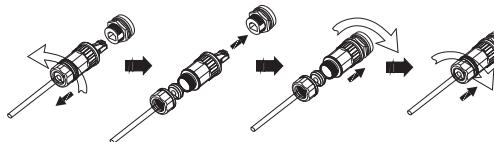

- Connect the Power Cable (L2) of each battery to the junction box (need to purchase separately). Connect the output power cable of the junction box to the battery port of the inverter.



STEP-2:  
(Optional) Install the cable covers.

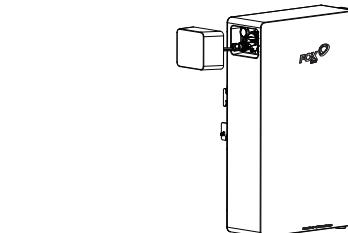


For installation: Mount the cable covers on the battery sides after wiring. Their magnetic base allows for direct attachment and a secure fit.

Note:

Under special circumstances when both PV and Grid power are out of order, the battery can be activated through the "Black Start" function. This means that our energy storage inverter and battery can continue to operate. The startup steps for Black Start are as follows:

- Ensure correct battery-inverter connection prior to Black Start. No wiring modifications during Black Start.
- Turn on the DC switch, press and hold the power button for 3 seconds, then release.
- Press the "Power Switch" button three times in succession within 4 seconds (Complete within 30 seconds after the battery system starts up).
- The Status LED remains solid green, indicating successful activation of Black Start mode.

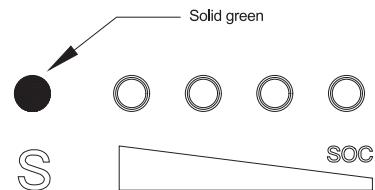

Please scan the QR Code and follow the steps below to download our latest multi-language User Manual/Quick Installation Guide:

Scan the QR Code → Select your Language → Choose to download User Manual or Quick Installation Guide → Download



Note: Different model of batteries cannot be mixed in one system, any further questions related to the battery versions please contact our technical team at service@fox-ess.com.

## 7. System Start Up

Rotate the "DC Switch" of each battery to the "ON" position, then press and hold the "Power Switch" on the **Main** battery for about 3 seconds, and then release the switch. Each battery LED will light up and flash, indicating that the battery has been activated.

